



CUT

USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

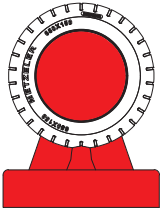

R1 x2

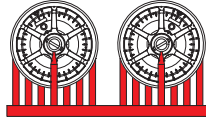

R2


R3



R4




R5




R6


1

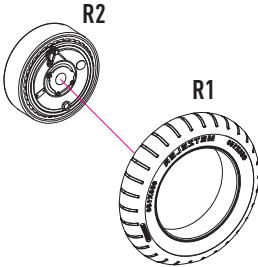

2

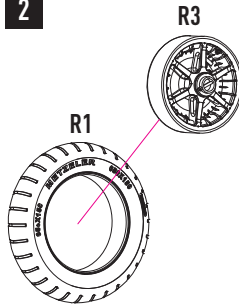

3

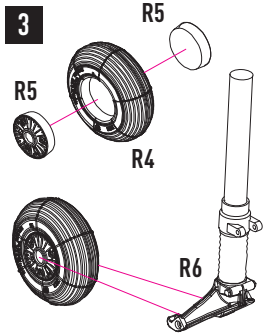

4


**CORRECT WHEEL
POSITION**

R3+R1



LEFT (FLIGHT VIEW)

R2+R1

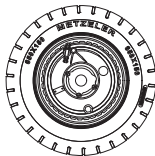

RIGHT (FLIGHT VIEW)

