





CUT

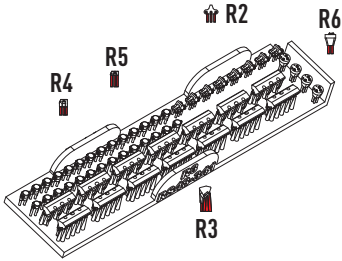


USE A SAW TO REMOVE SUPPORTS FROM 3D PRINTED PARTS

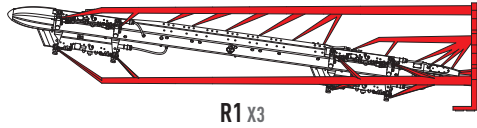

1

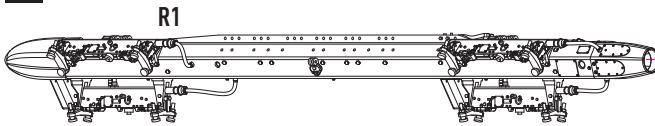


ORIENTATION VIEW

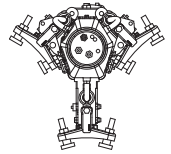

BACK VIEW


2

THE EXACT SIZE DEPENDS ON THE PYLON

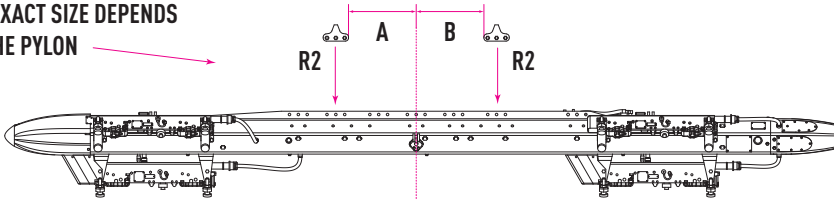


3

THE EXACT SIZE DEPENDS ON THE PYLON

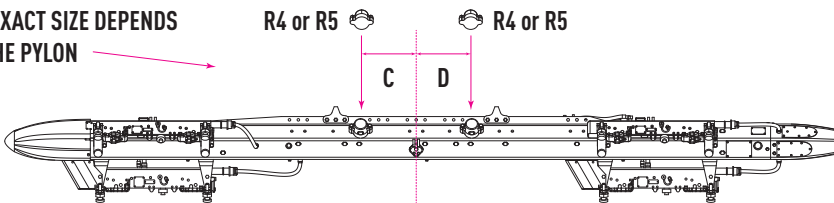


4

FOR A-4 SKYHAWK

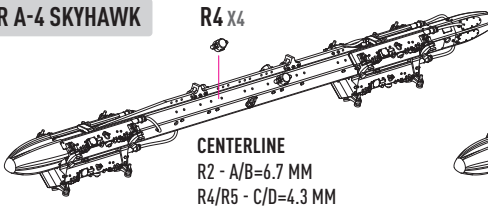


CENTERLINE  
R2 - A/B=6.7 MM  
R4/R5 - C/D=4.3 MM

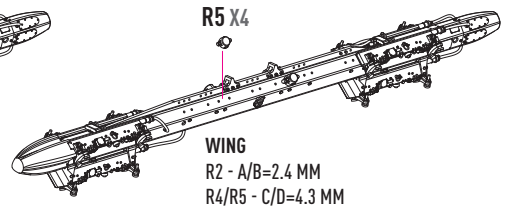


WING  
R2 - A/B=2.4 MM  
R4/R5 - C/D=4.3 MM


### 5 FOR A-6 INTRUDER

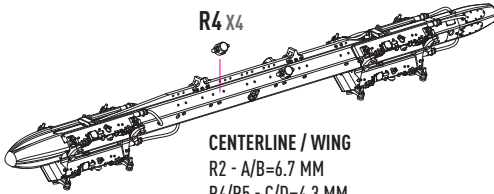

### 6 FOR A-7 CORSAIR II

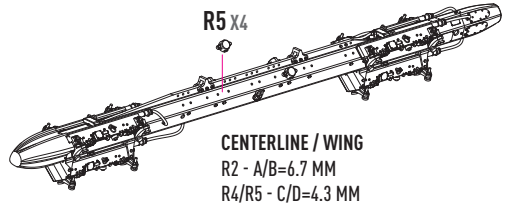


### 7 FOR F-4 PHANTOM II

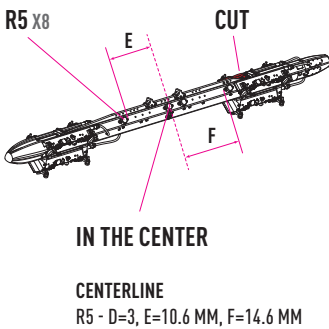

### RIGHT SIDE

LEFT WING R5 X2  
RIGHT WING R4 X2

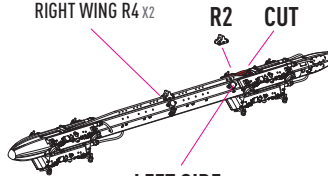

### LEFT SIDE


LEFT WING R5 X2  
RIGHT WING R4 X2

### WING FWD POSITION

R4/R5 - F=14.6 MM

### RIGHT SIDE

LEFT WING R5 X2  
RIGHT WING R4 X2

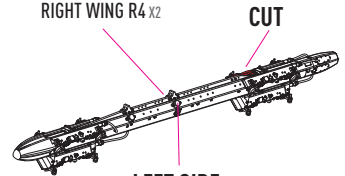



### LEFT SIDE

LEFT WING R5 X2  
RIGHT WING R4 X2

### WING AFT POSITION

R4/R5 - E=10.6 MM

### 8 FOR F/A-18

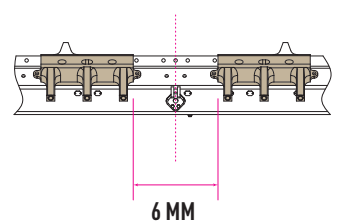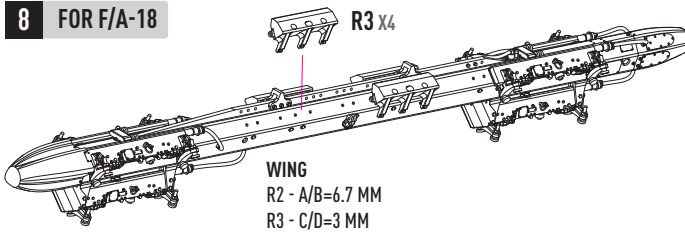

### DECAL INSTRUCTION

