



CUT


USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS



R1 x2 (APU-470)

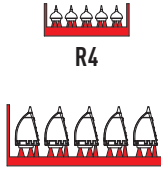


R3




R2 x4

1

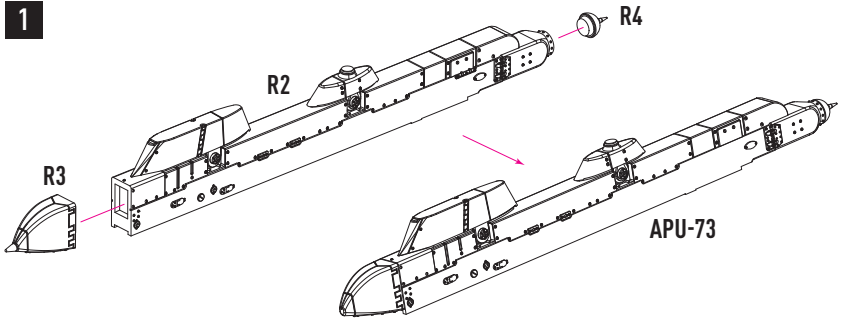

2

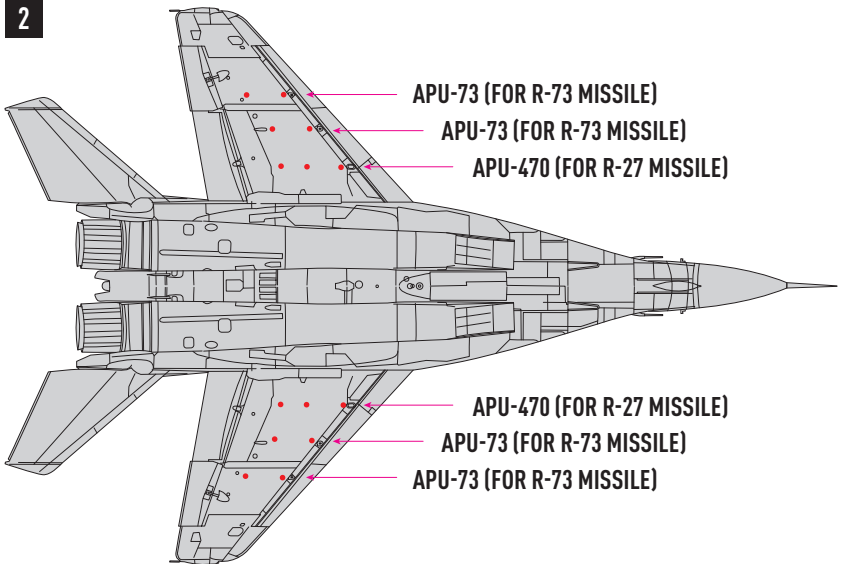

COLORS	GUNZE / ADEGUS	GUNZE / MR.COLOR	FEDERAL STANDARD
GRAY	H308	C308	FS 36375

