



CUT




USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS




R1 X2



R2 X2

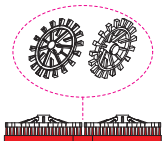


R3 X1




R4 X2




R5 X2



R6 X2




R8 X2




R7 X2

1 X2

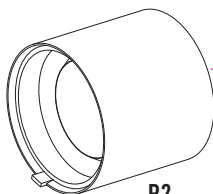

R2

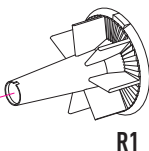


R1

2 X2




P1

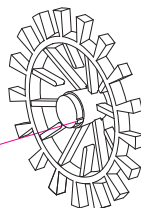


R3

3 X2




R2

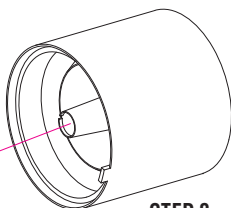


STEP 2

4 X2

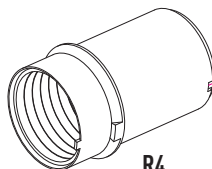


R4

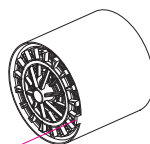


STEP 3

5 X2

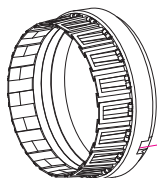


R5

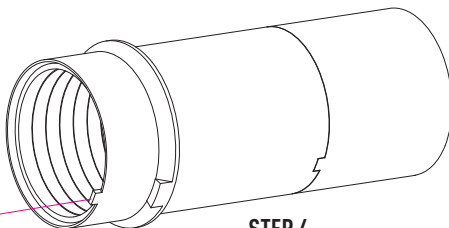


STEP 4

6 X2

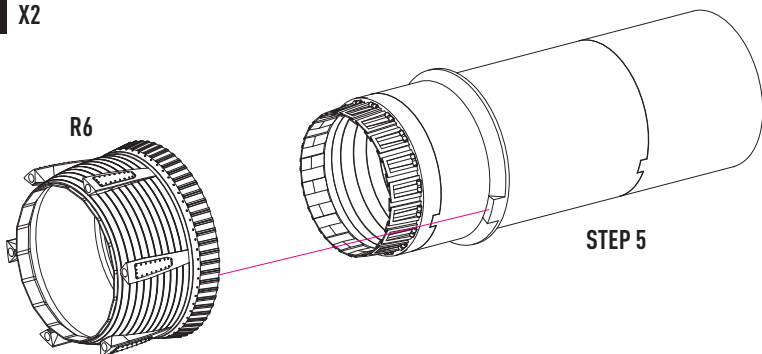

7 X2

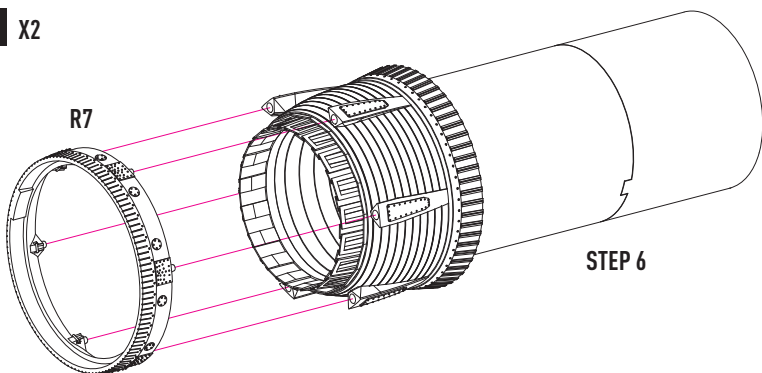

8 X2

