
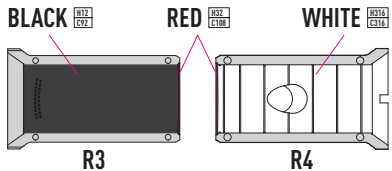
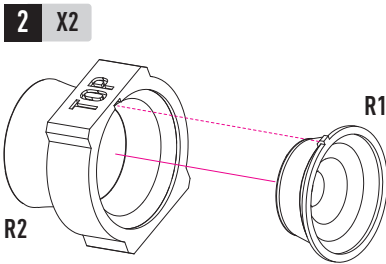
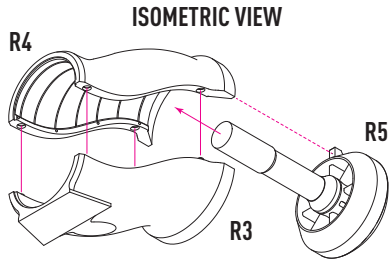
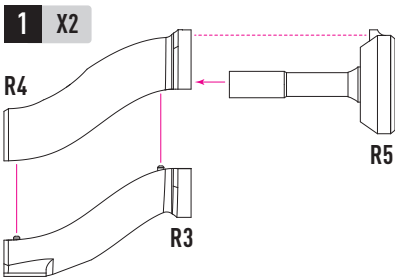
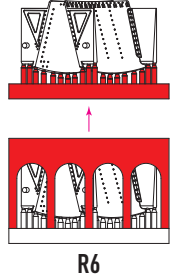
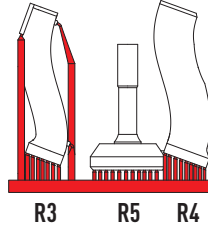


### CUT

USE A SAW TO REMOVE SUPPORTS FROM 3D PRINTED PARTS

### REMOVE PROTECTIVE COVER



### PAINT INSTRUCTION

COLORS	GUNZE / AEGEDUS	GUNZE / MR.COLOR
BLACK	H12	C92
WHITE	H316	C316
RED	H32	C108

### 4 REPLACE PARTS FROM KINETIC KIT

