

DETAILS AFTER REMOVAL FROM SUPPORTS




R1



R2




R4

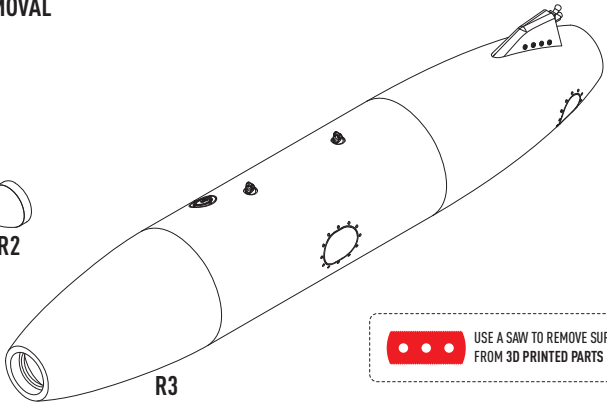

R3

USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

1




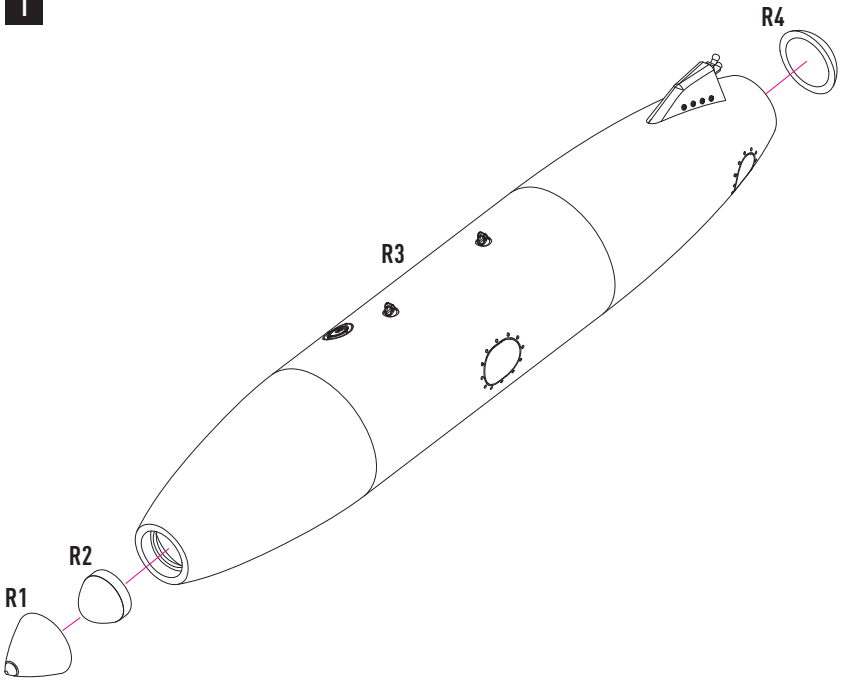


R4

R3

R2

R1

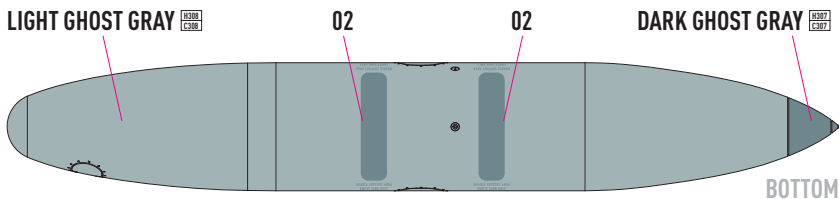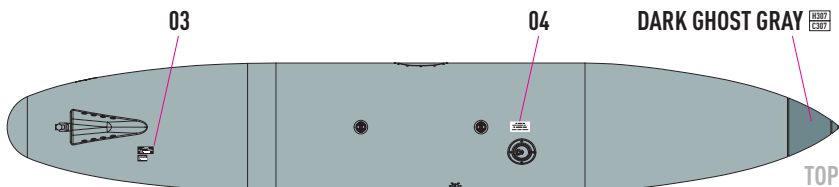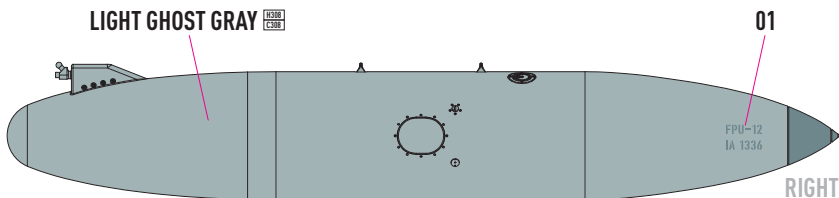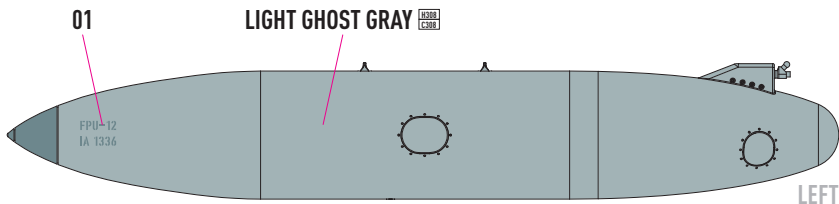

COLORS	GUNZE / AEROSOL	GUNZE / MR.COLOR
LIGHT GHOST GRAY	H308	C308
DARK GHOST GRAY	H307	C307